





Variable displacement vane pump with mechanical pressure compensator

PLP



| Series Name | Displacement [cm³/r] | Flow rate at 1450rpm [l/min] | Max Pressure [bar] | |
|----------------|-------------------------|------------------------------------|--------------------------|--|
| 01 PLP 05-16 | 16 | 23 | 120 | |
| 01 PLP 1-20 | 20 | 29 | 100 | |
| 01 PLP 1-25 | 25 | 36 | 100 | |
| 01 PLP 1-32 | 32 | 47 | 100 | |
| 01 PLP 2-40 | 40 | 58 | 100 | |
| 01 PLP 2-50 | 50 | 73 | 100 | |
| 01 PLP 2-63 | 63 | 92 | 100 | |
| 01 PLP 3-80 | 80 | 116 | 90 | |
| 01 PLP 3-100 | 100 | 145 | 90 | |
| 01 PLP 3-120 | 120 | 174 | 90 | |

General description

PLP pumps are low pressure variable displacement vane pumps equipped with a mechanical pressure regulating device that allow you to instantly adjust the flow rate accordingly to circuit requirements. Variable displacement vane pumps are volumetric type so they deliver a maximum flow rate equivalent to its displacement for their speed of rotation. Operating pressure is due to pressure loads encountered by the fluid within the system. When the outlet pressure (on the system) equals the pump setting pressure, the flow rate is adjusted to the values required by the system. When this value is achieved, pump reduces its flow rate to zero, keeping the pressure almost constant. In zero flow conditions, pump delivers oil only to compensate any possible drain and piloting.

The series of PLP pumps, like all other Berarma variable displacement vane pumps, ensure:

- Silent running
- High efficiency
- Long working life
- Economy and simplification of hydraulic system
- Modular design
- Energy saving


The innovation related to the series of vane pumps has led to an improvement of displacement control dynamics and improved axial balancing thanks to the refinement of the hydrostatic compensation of the distribution plates.

The series of PLP pumps is supplied with:

- ISO standard mounting flanges and shafts
- Gas BSP and/or SAE 3000 standard port connections
- Max. flow regulator unit to mechanically reduce pump max. displacement
- · Mechanical pressure regulating device
- Thru drive shaft (only with the option "A") to arrange combined pumps between Berarma pumps or the main other types of pump available on the fluid power market

What makes the Berarma PLP series pumps very interesting for the market?

- Innovative shapes and design
- Compact overall dimensions
- Wear reduction of the internal pump cartridge parts

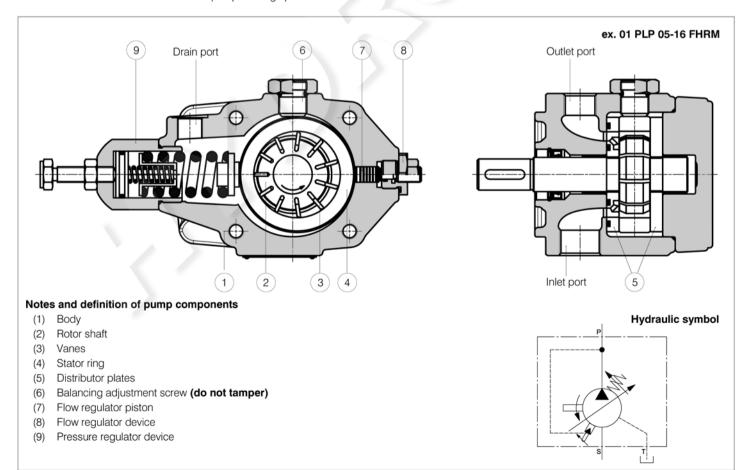


Technical data

| Size | 05 | 1 | 2 | 3 | | |
|--|--|--------------|--------------|--|--|--|
| Geometric displacement according to ISO 3662 (cm³/r) | 16 | 20 ÷ 25 ÷ 32 | 40 ÷ 50 ÷ 63 | 80 ÷ 100 ÷ 120 | | |
| Actual displacement (cm³/r) Due to manufacturing tolerances, the value can vary by approx. ±3% | 17 | 21 ÷ 26 ÷ 33 | 42 ÷ 51 ÷ 63 | 80 ÷ 100 ÷ 123 | | |
| Maximum working pressure (bar) Pressure peak exceeding 30% of the maximum operating pressure must be eliminated by adopting the appropriate measures | 120 | 100 | | 90 | | |
| Pressure setting range (bar) | H : 20 ÷ 120 | | | L : 30 ÷ 50 H : 50 ÷ 90 | | |
| Permitted maximum drain port pressure (bar) | | | 1 | | | |
| Inlet pressure (bar) | 0.8 ÷ 1.5 absolute | | | | | |
| Speed range (rpm) | 800 ÷ 1800 | | | | | |
| Rotation direction | R: right (clockwise) viewed from shaft end | | | | | |
| Load on drive shaft | NO RADIAL OR AXIAL LOADS ALLOWED | | | | | |
| | HM according to ISO 6743-4 HLP according to DIN 51524-2 | | | | | |
| Hydraulic fluid | HEES according to ISO 15380 FPM-Viton seals | | | | | |
| for other fluids please contact Berarma technical sales service | HFD according to ISO 12922 FPM-Viton seals HFC according to ISO 12922 water <40% ÷ NBR seals ÷ Vmax 1000rpm ÷ Temp. < | | | | | |
| | | | <40°C | | | |
| Viscosity range (cSt, mm²/s) | 22 ÷ 68 at operating temperature | | | | | |
| Starting viscosity under full flow conditions (cSt, mm²/s) | 400 max. | | | | | |
| Viscosity index according to ISO 2909 | 100 min. | | | | | |
| Inlet fluid temperature range (°C) | +15 / +60 ÷ pay attention to viscosity range | | | | | |
| Maximum acceptable fluid contamination level | 20/18/15 according to ISO 4406 CLASS 9 according to NAS 1638 | | | | | |
| Recommended fluid contamination level for a longer pump working life | 18/16/13 according to ISO 4406 CLASS 7 according to NAS 1638 | | | | | |
| Moment of inertia (kgm²) | 0.00012 | 0.0005 | 0.00909 | 0.015 | | |
| | 7.4 | 18.4 | 43.8 | 54.3 | | |

Installation and start-up

For the installation and start-up of Berarma pumps please refer to related **Document INSTALLATION AND START-UP INSTRUCTIONS** available on our website and provided in hard copy with every pump supplied.

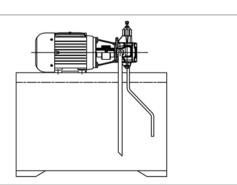


Ordering code


| Series Name | | Size acement | Flange | Pressure setting | Rotation | Seals | |
|---|--|------------------------------------|--------|---------------------|----------|-------|--|
| 01 PLP | 05 | - 16 | F | H | R | М | |
| Code 05 - 16 1 - 20 1 - 25 1 - 32 | Size 05 1 1 1 | Displacement cm³/r 16 20 25 32 | | | | | |
| 2 - 40 | 2 | 40 | - | | | | |
| 2 - 50 2 - 63 | 2 | 50 63 | - | | | | |
| 3 – 80 | 3 | 80 | | | | | |
| 3 – 100 | 3 | 100 | | | | | |
| 3 – 120 | 3 | 120 | 1 | | | | |
| | | | - | | | | |
| Code | Flange | Ports | T | | | | |
| F | ISO 3019-2 4 holes | Gas BSP SAE 3000 | | | | | |
| FGR2 only for size 05 | Rectangular gear pump 2 | Gas BSP | | | | | |
| Code | Pressure setting | g (bar) | | | | | |
| L | 15 ÷ 50 for size 1 30 ÷ 50 for size 3 | | | | , | | |
| н | 20 ÷ 120 for size 30 ÷ 100 for size 50 ÷ 90 for size 3 | 1 and 2 | | | | | |
| Code | Rotation direction | on | | | | | |
| R | Right (cw) view | | | | | | |
| | | | | | | | |
| Code | Seals | | | | | | |
| М | NBR | | | | | | |
| E | FPM – Viton | | | | | | |
| | | | _ | | | | |
| Code | Option | | | | | | |
| / | Omit for no opti | ion | | | | | |
| Α | Thru drive shaft pumps (only for | for combined | | | | | |


Ordering code examples:


- 01 PLP 05-16 FGR2 H R M
- 01 PLP 05-16 F H R M A
- 01 PLP 1-32 F L R M
- 01 PLP 2-40 F H R M A
- 01 PLP 3-120 F H R M A


01 PLP 05-16

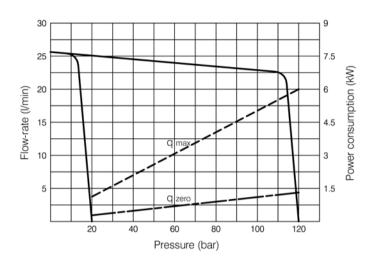


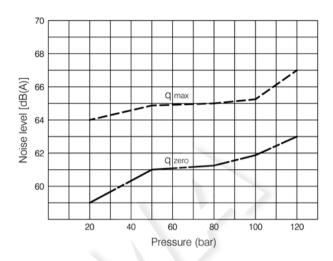


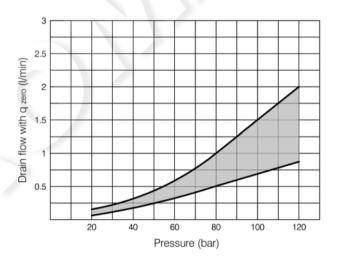


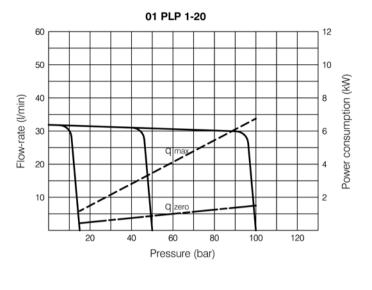


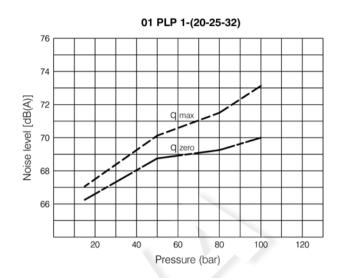


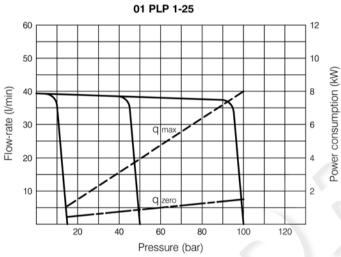


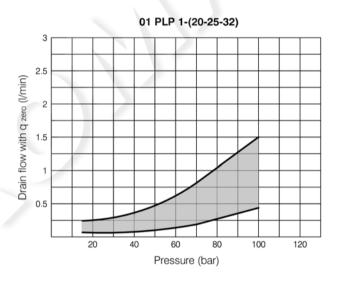


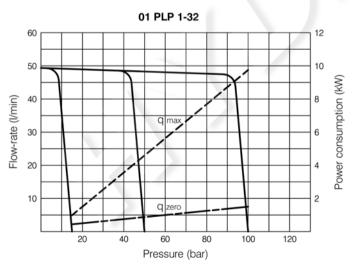


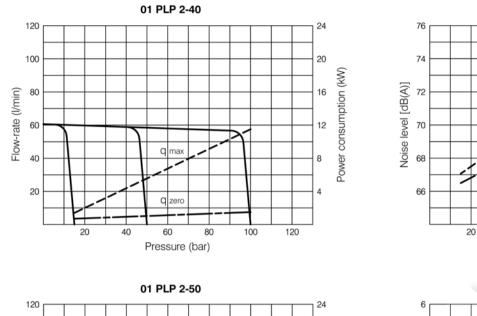


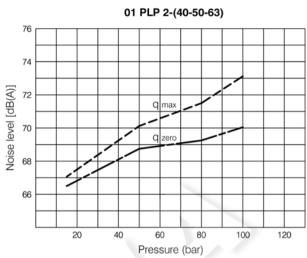


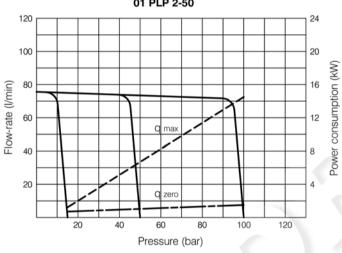


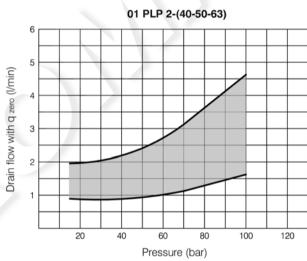


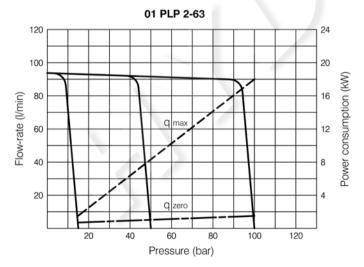


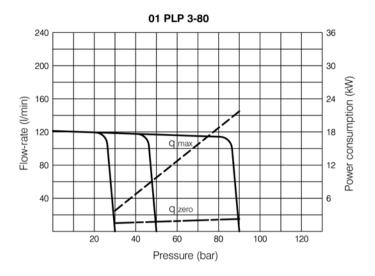

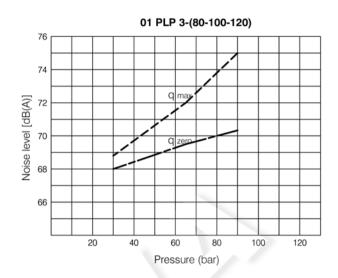


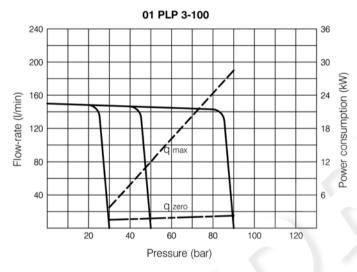

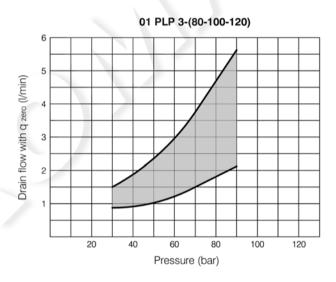

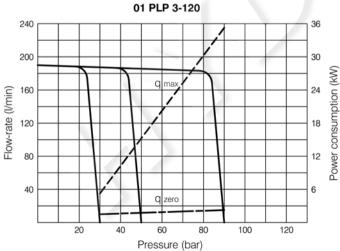


01 PLP 05-16 - Flange "F"

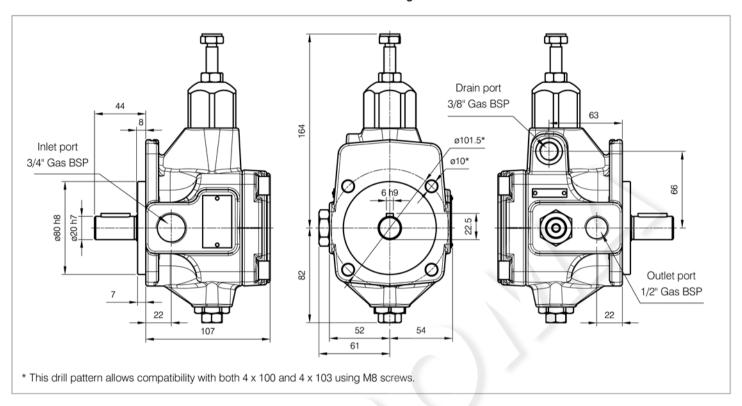


01 PLP 05-16 - Flange "F" + Option "A"

01 PLP 05-16 - Flange "FGR2"

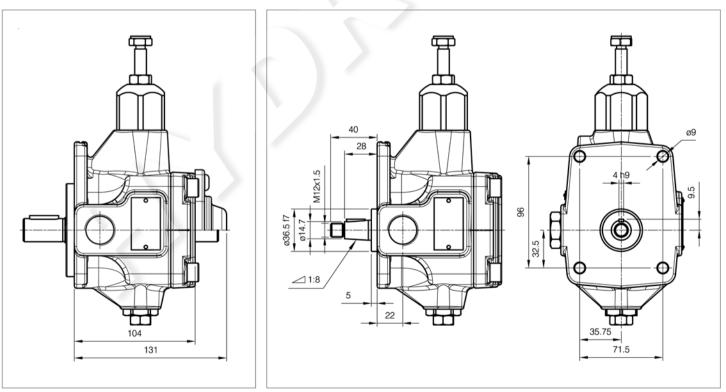


For information, please refer to related Catalog COUPLINGS and ACCESSORIES

01 PLP 1-(20-25-32)

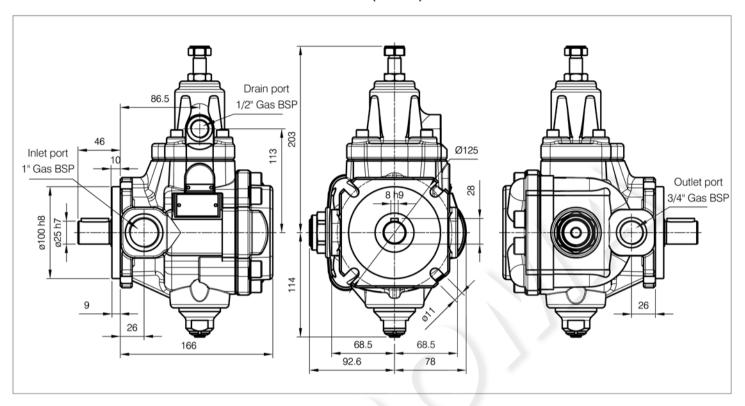


01 PLP 1-(20-25-32) + Option "A"

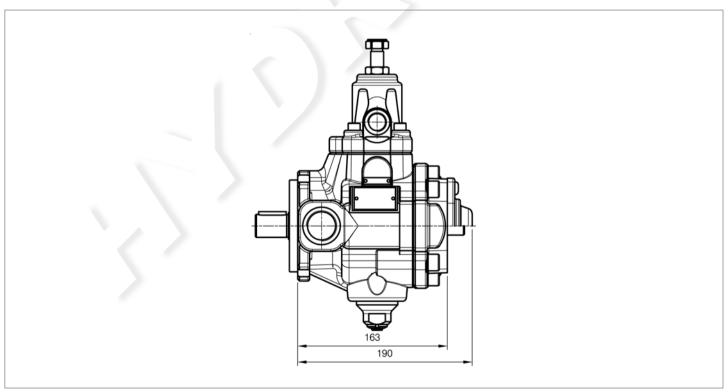


For information, please refer to related Catalog COUPLINGS and ACCESSORIES

01 PLP 2-(40-50-63)

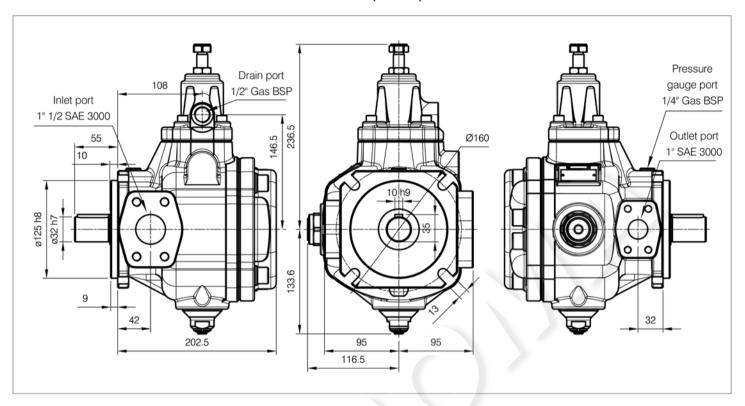


01 PLP 2-(40-50-63) + Option "A"

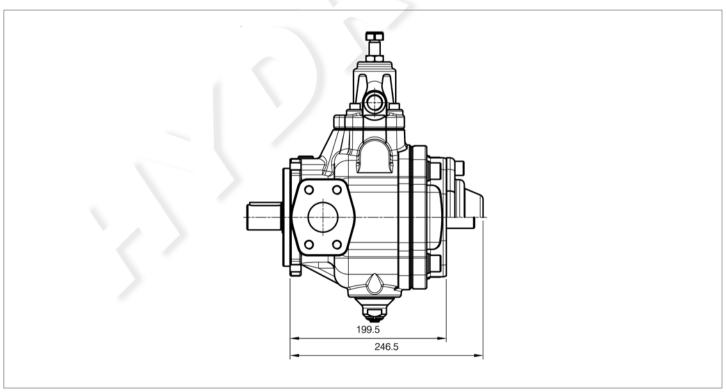


For information, please refer to related Catalog COUPLINGS and ACCESSORIES

01 PLP 3-(80-100-120)

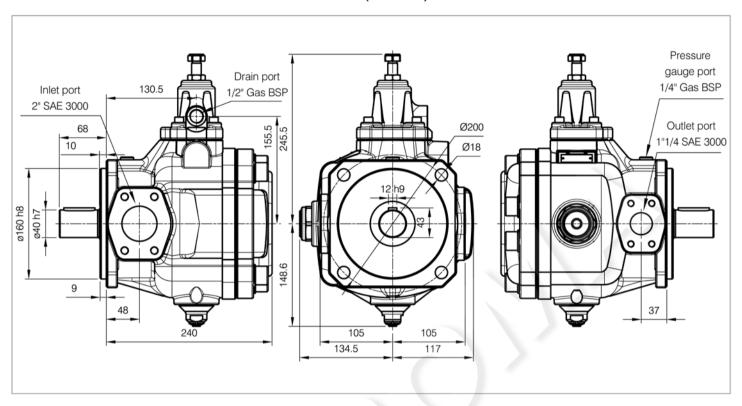

01 PLP 3-(80-100-120) + Option "A"

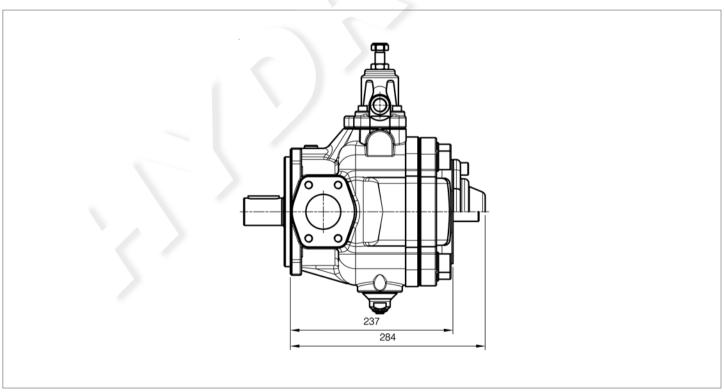

For information, please refer to related Catalog COUPLINGS and ACCESSORIES

Settings


Pressure

All Berarma PLP pumps are equipped with a mechanical pressure adjustment device that allow to adjust the maximum working pressure of the pump. By screwing clockwise, the pressure increases.

Warning

Do not go out of the pressure setting range.

During the first start-up, make sure that the pressure adjustment screw is screwed enough to ensure the correct pump priming.

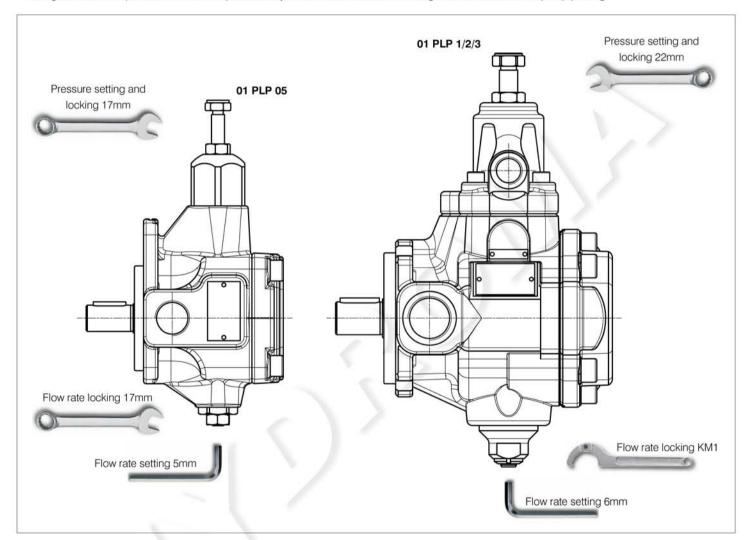

Flow rate

All Berarma pumps are equipped with a flow regulator device that allow the mechanical reduction of the maximum pump displacement compared to the nominal value. By screwing clockwise, the flow rate decreases.


Warning

If the flow regulator device is set to less than 50% of the nominal displacement, the pump can only start on condition that the system and pump are completely filled with fluid.

| Pump type | Actual displacement (cm ³ /r) | Reduced displacement by screw turn (cm ³ /r) | Minimum displacement (cm ³ /r) | |
|-----------------------|--|--|--|--|
| 01 PLP 05 - 16 | 17 | 9.7 | 3.1 | |
| 01 PLP 1 - 20 | 21 | 10 | 9.5 | |
| 01 PLP 1 - 25 | 26 | 10 | 15 | |
| 01 PLP 1 - 32 | 33 | 10 | 19 | |
| 01 PLP 2 - 40 | 42 | 16 | 27.5 | |
| 01 PLP 2 - 50 | 51 | 16 | 35.5 | |
| 01 PLP 2 - 63 | 63 | 16 | 43.5 | |
| 01 PLP 3 - 80 | 80 16 | | 63 | |
| 01 PLP 3 - 100 | 3 - 100 100 16 | | 80 | |
| 01 PLP 3 - 120 | 120 | 16 | 100 | |

Accessories


Electric motors with special flange and hollow shaft for direct coupling with Berarma pumps size 05 and 1. For information, please refer to related **GMP Catalog**

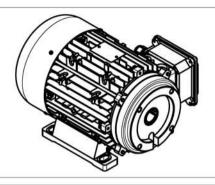

Non return valves integrated on SAE flange, ideal to be installed on Berarma Berarma pump size 2 and 3 outlet port or for installation on hydraulic systems. For information, please refer to related **NRV Catalog**



Coupling unit that allow to arrange combined pumps between Berarma pumps or the main other types of pump available on the fluid power market. For information, please refer to related **COUPLINGS and ACCESSORIES Catalog**

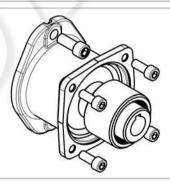

SAE 3000 flanges ideal to be installed on Berarma pump size 2 and 3 inlet and outlet ports.

For information, please refer to related **COUPLINGS and ACCESSORIES Catalog**





Warning

All Berarma pumps have been carefully checked during manufacture and subjected to testing cycles before shipment. To achieve optimum performance, avoid problems and maintain the warranty, the installation instructions, enclosed with each pump supplied, must be strictly observed.

Notes

Before selection and/or use of any Berarma product, it is important that the purchaser carefully analyses all aspects of its application and reviews the information in the current Berarma technical sales documents. Due to the many different operating conditions and applications for Berarma products, the purchaser, through their own analysis and testing, is solely responsible for making the final selection of the products and assuring that all performance and safety requirements are met. Berarma S.r.l. accepts no responsibility for any editing mistakes in this catalogue. Berarma S.r.l. reserves the right to modify the products and data contained in this catalogue at any time and without prior notice.